



## WIRING DIAGRAMS

1. NAMING OF PARTS
2. COLOUR CODES
3. SCHEMATIC DIAGRAM
4. WIRING DIAGRAM

### INSTALLATION COMPONENTS UNDER THE BONNET

#### 1. NAMING OF PARTS

BB0 Battery  
BB1 Battery plus unit  
CA Ignition switch  
PSF Connection board - Fuse box  
C1300 Injection-ignition test connector  
V1300 Injection-ignition test warning lamp  
1000 Starter inhibitor switch (automatic transmission)\*  
1135 Ignition coil  
1200 Fuel pump relay  
1205 Fuel pump fuse  
1210 Fuel pump  
1215 Canister purge solenoid valve\*  
1220 Coolant thermistor  
1239 Idle regulation valve  
1240 Inlet air thermistor  
1302 Injection supply relay  
1312 Inlet manifold pressure sensor  
1313 Engine speed sensor  
1317 Throttle potentiometer  
1320 Injection-ignition control unit  
1330 Injector  
1348 Oxygen sensor heater fuse  
1350 Oxygen sensor  
4 Instrument panel  
8000 Air conditioning switch\*  
8005 Air conditioning switch\*  
8020 Compressor supply relay\*  
\* According to equipment


#### 2. COLOUR CODES

BA: white.  
BE: blue.  
GR: grey.  
JN: yellow.  
MR: brown.  
NR: black.  
VE: green.  
VI: mauve.



# WIRING DIAGRAMS


## 3. SCHEMATIC DIAGRAM

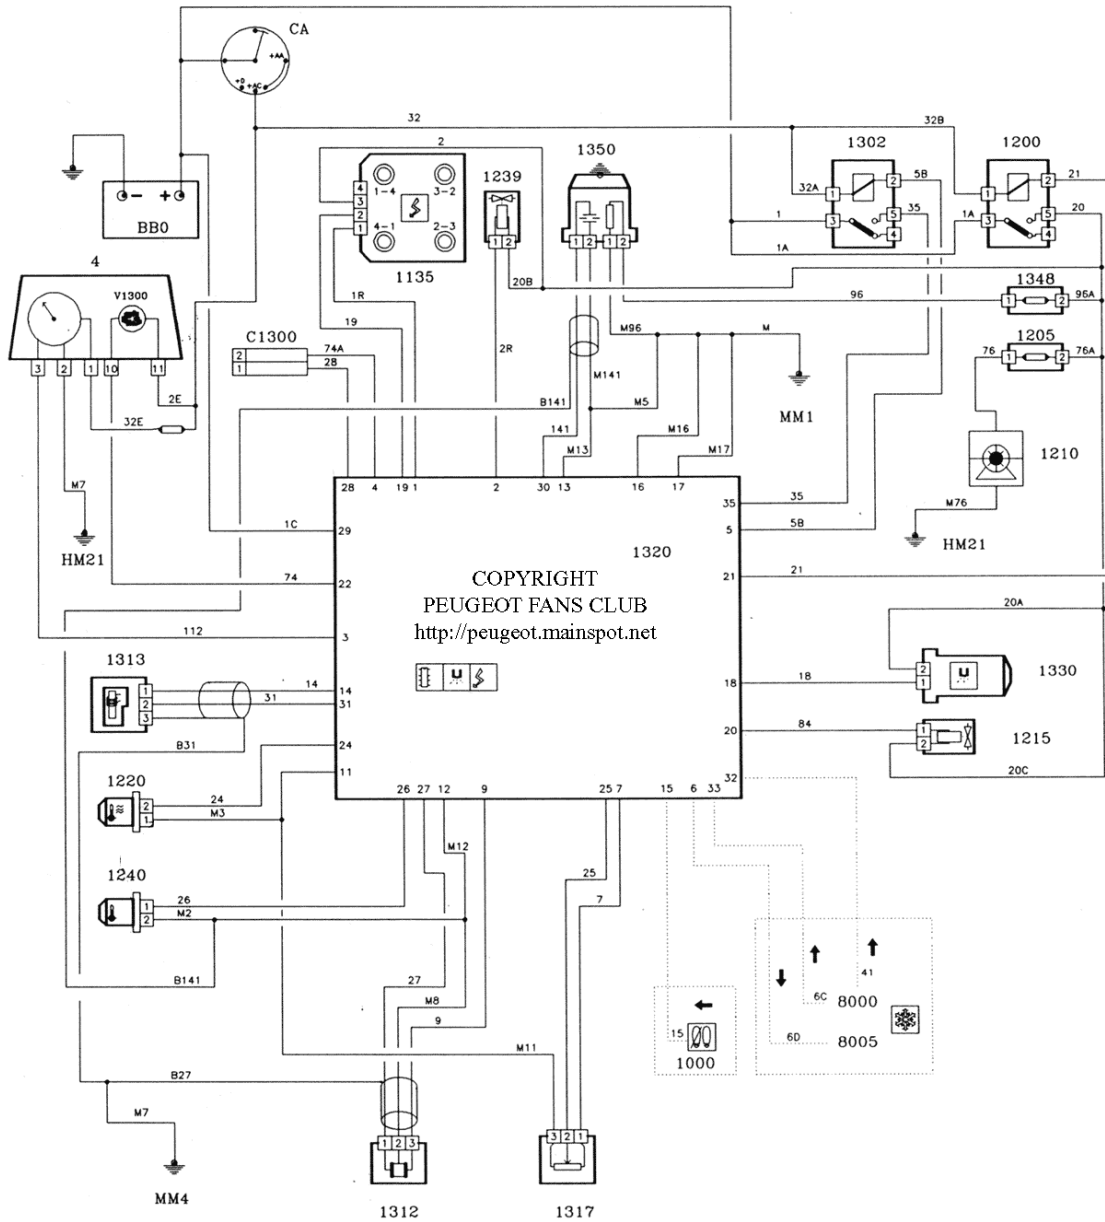

## 4. WIRING DIAGRAM



# WIRING DIAGRAMS

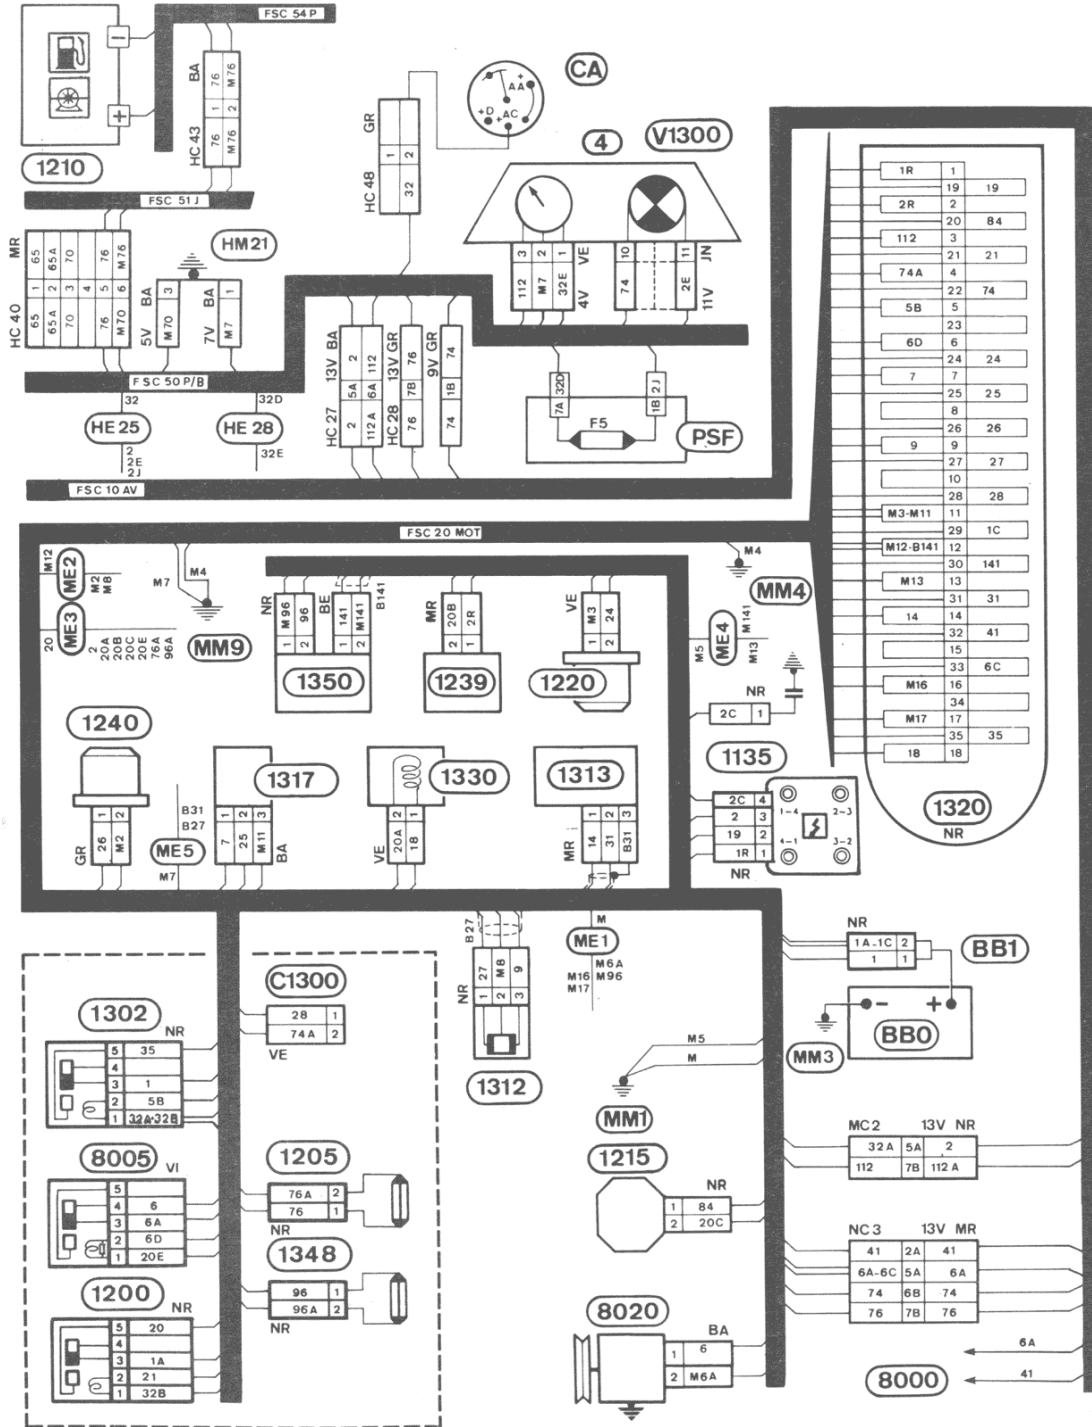

## INSTALLATION COMPONENTS UNDER THE BONNET



## WIRING DIAGRAMS

